

QUICK INSTRUCTION GUIDE

to manually connect the pins for 3rd party crossfaders

NOTE! This manual is only relevant to users who have purchased a unit in Japan, USA, Australia or New Zealand, with a serial number beginning with RT1904xxxx. All other units have this configuration already by default.

STEP 1




Remove all screws from the bottom housing.

STEP 2




Lift the bottom cover from the right, as shown on the picture above.

STEP 3

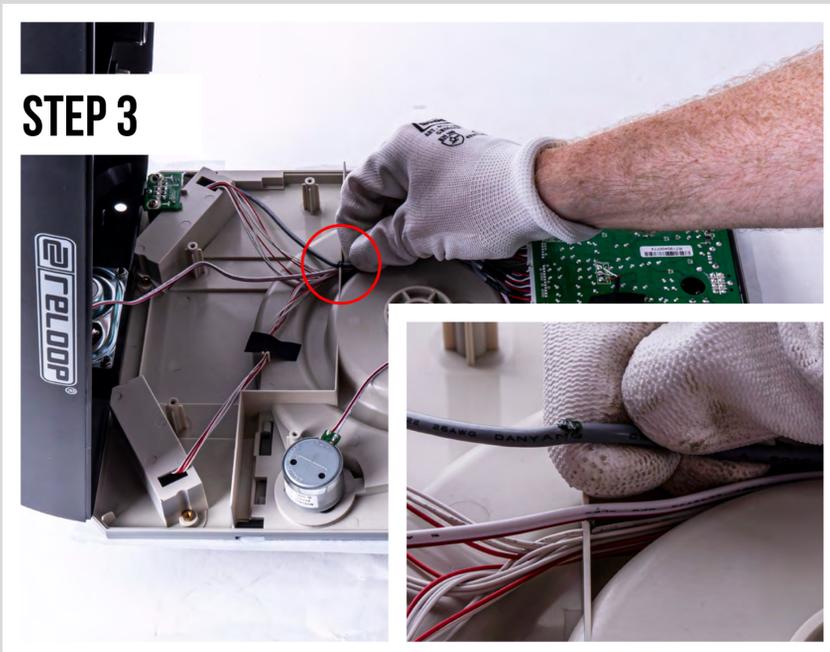


Lift the thick gray cable out of its notch.

STEP 4

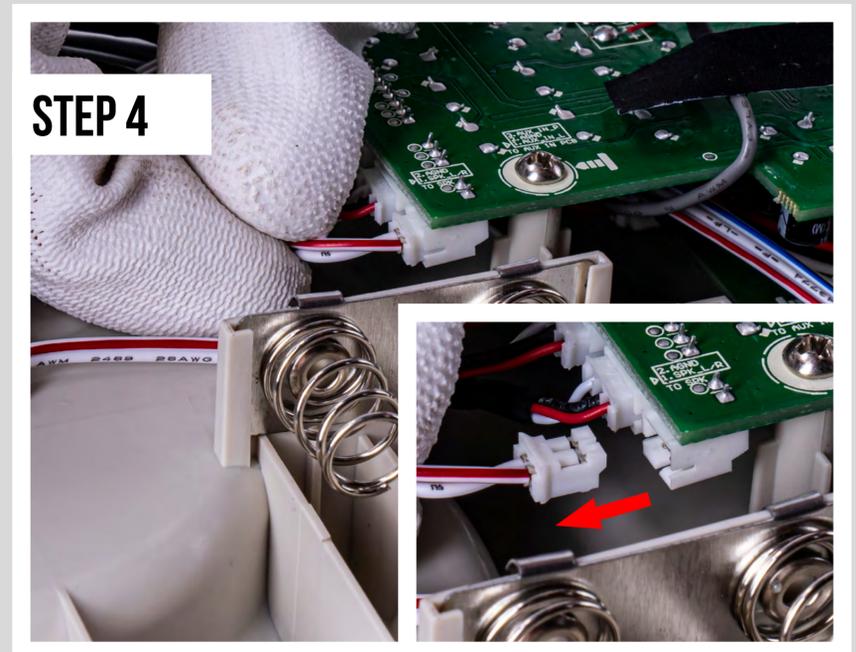


Detach the speaker cable, as shown on the picture.

STEP 5

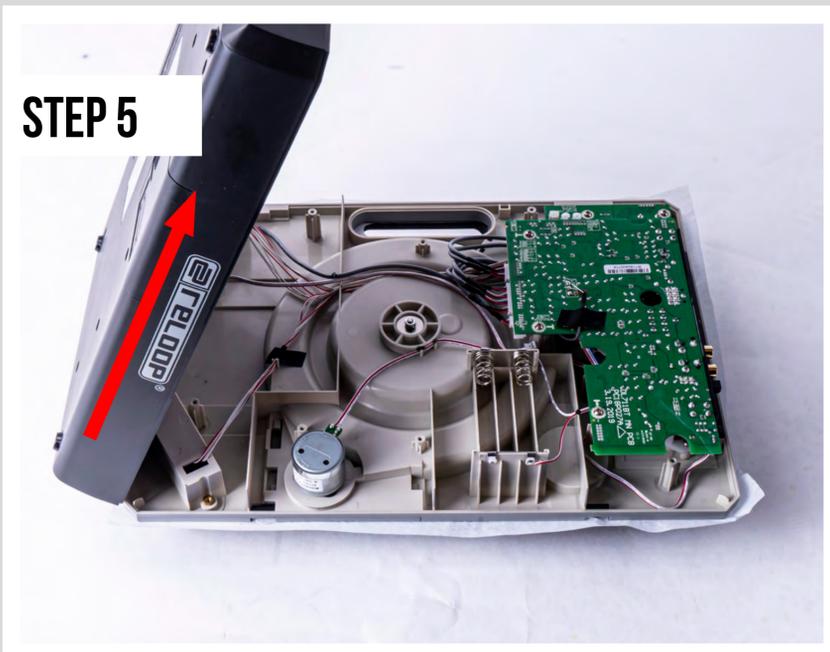

Now completely remove the bottom cover.

STEP 6

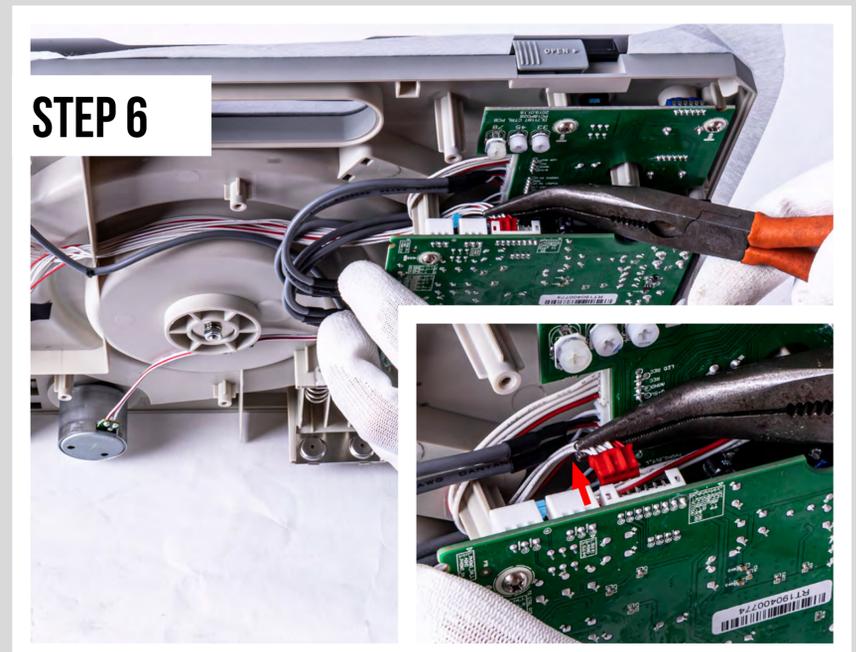


Gently remove the red fader cable connector from the first four left pins.


QUICK INSTRUCTION GUIDE

to manually connect the pins for 3rd party crossfaders


NOTE! This manual is only relevant to users who have purchased a unit in Japan, USA, Australia or New Zealand, with a serial number beginning with RT1904xxxx. All other units have this configuration already by default.

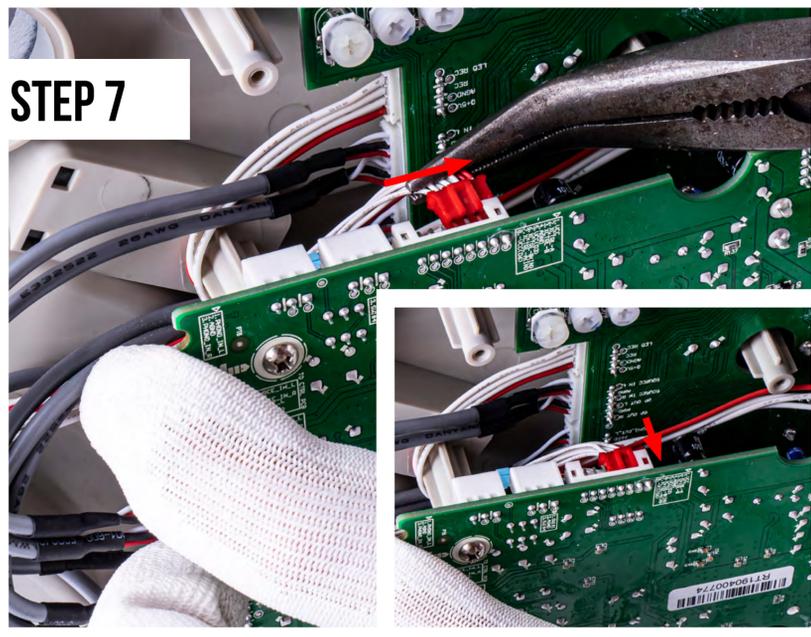


Now, reconnect the red fader cable connector on the last right four pins.

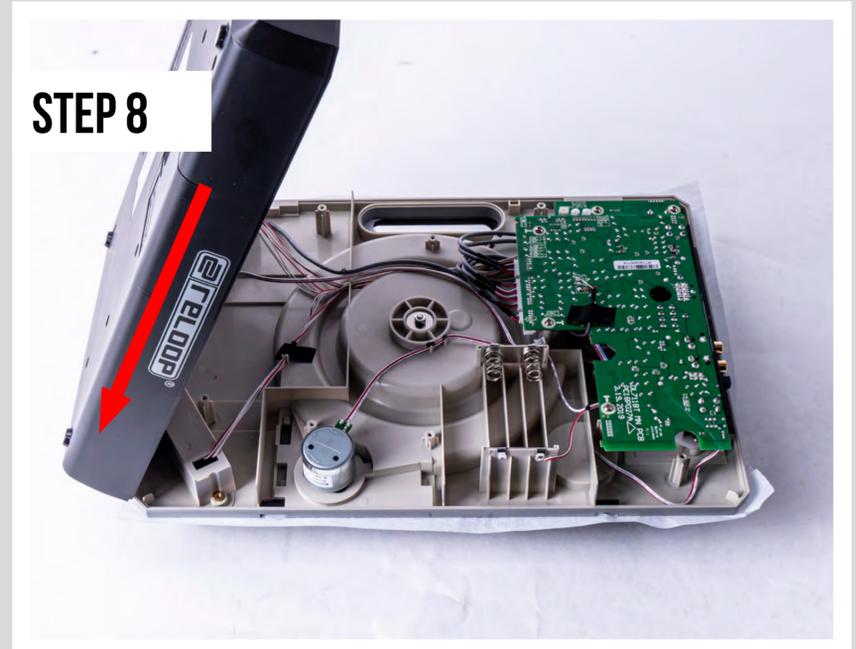

Reattach the bottom chassis.

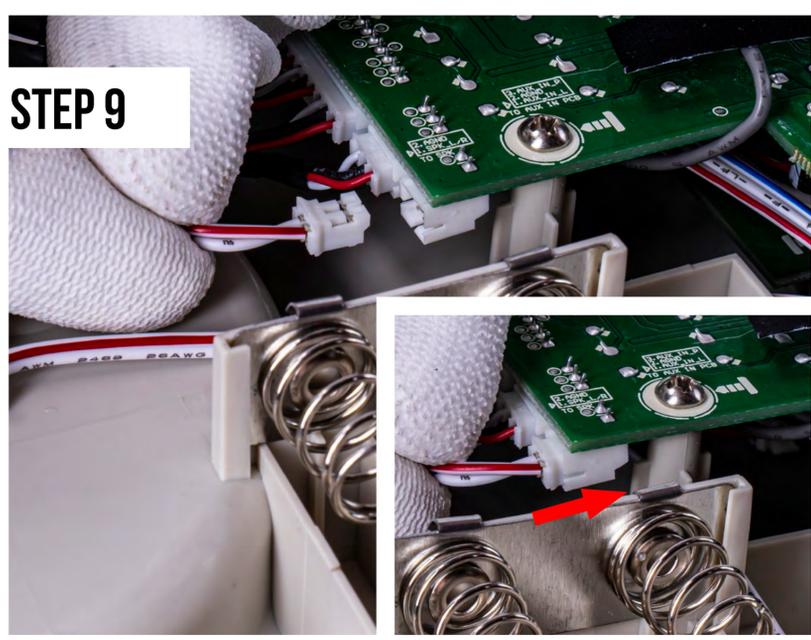

Reconnect the speaker cable.

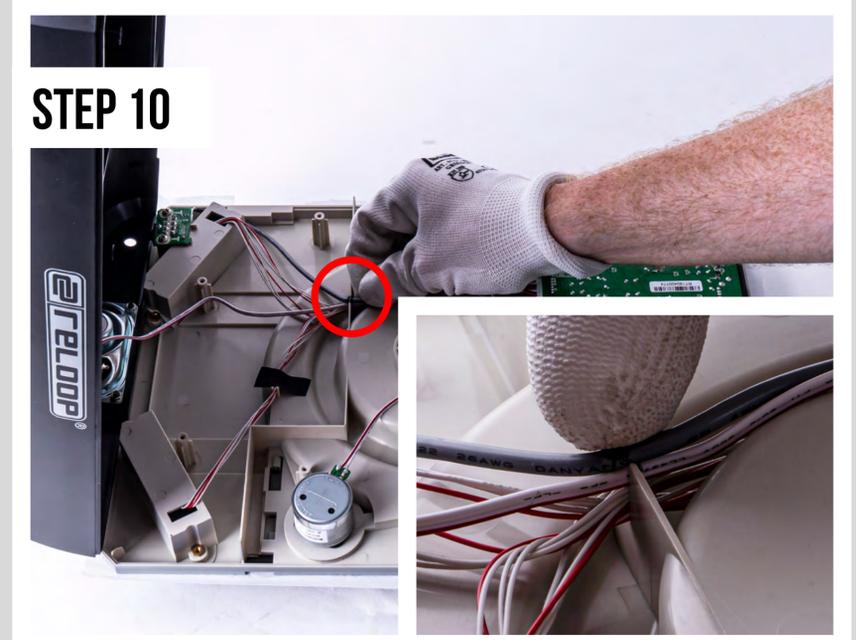

Place the gray cable in its original position.



Close the bottom chassis.



Tighten all screws.